


Sort&Cope


Sort&Cope application for Revit® Architecture and Revit® Structure provides a set of tools for managing a process of coping of Structural Framing Elements by predefined coping distance.

Supports metric and imperial unit systems
Available in different languages

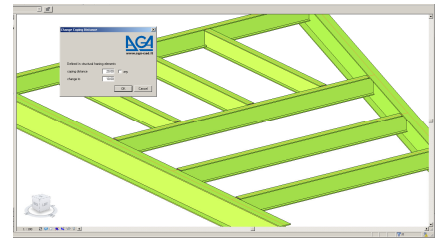

Sort&Cope functions:

- **Apply coping along one beam** - copes ends of all elements which are connected to the selected beam;
- **Apply coping between two beams** - copes ends of all elements which are connected to selected two beams;
- **Apply coping for selected beams** - copes connected ends of selected beams;
- **Change coping distance** - changes coping distance of selected beams;
- **Remove coping** - removes all copings from selected beams.

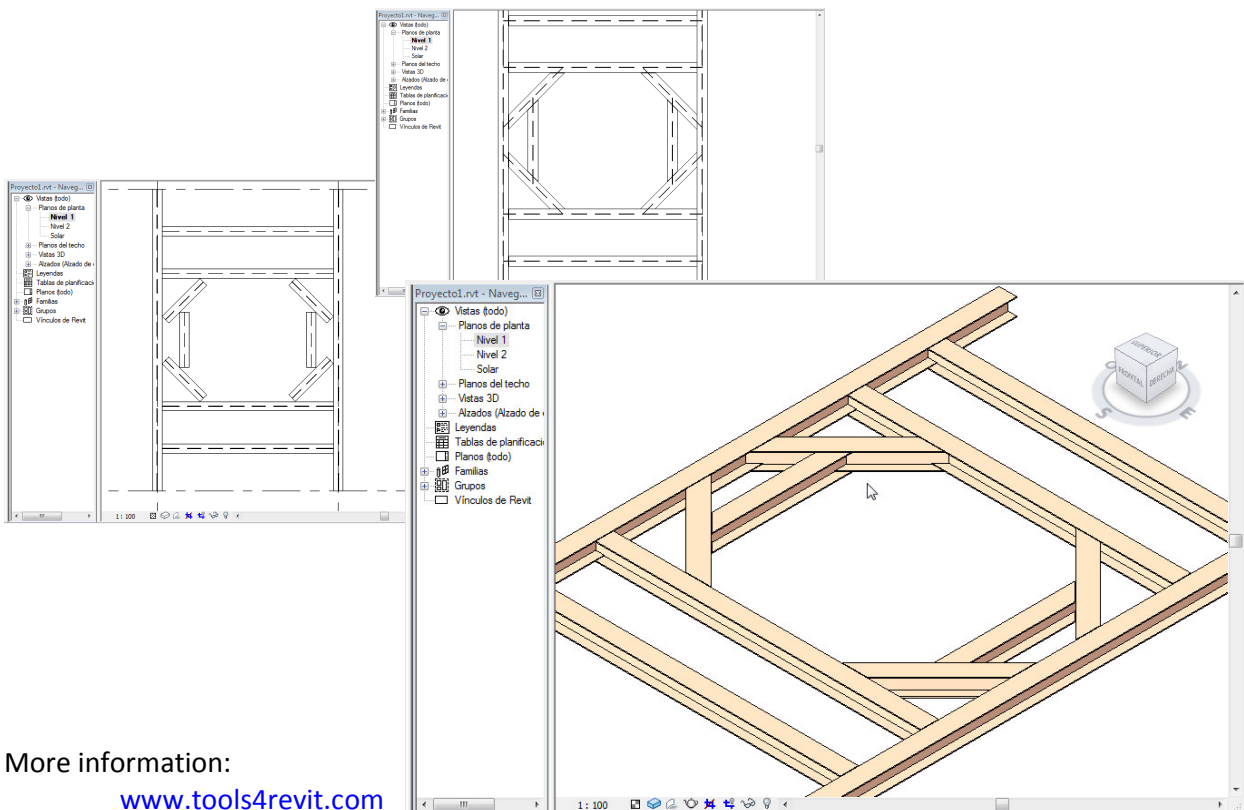

More information:

www.tools4revit.com